

OD-ONT-SSENC

Slack Storage Tray




tii

141 Rodeo Drive
Edgewood, NY 11717
Toll Free 888.844.4720
www.tiitech.com

tii technologies

Optional Outdoor Enclosure for ONT
OD-ONT-ENC

Optional Slack Storage Cover
OD-ONT-SSC

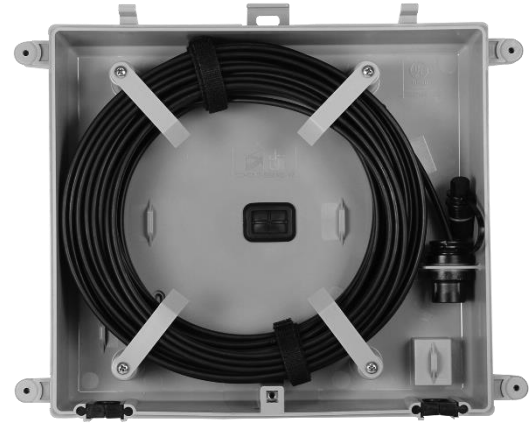

OD-ONT-SSENC
(Shown with OSP Fiber Drop Cable – not included)


Installation Note

Description

1. The OD-ONT-SSENC Slack Storage Tray provides storage for up to 75 ft. of Outdoor Optical cable. (See Figure 1).
2. Four screws are provided to enable mounting to the OD-ONT-ENC Outdoor Enclosure or the OD-ONT-SSC Slack Storage Cover.

Features

Figure 1

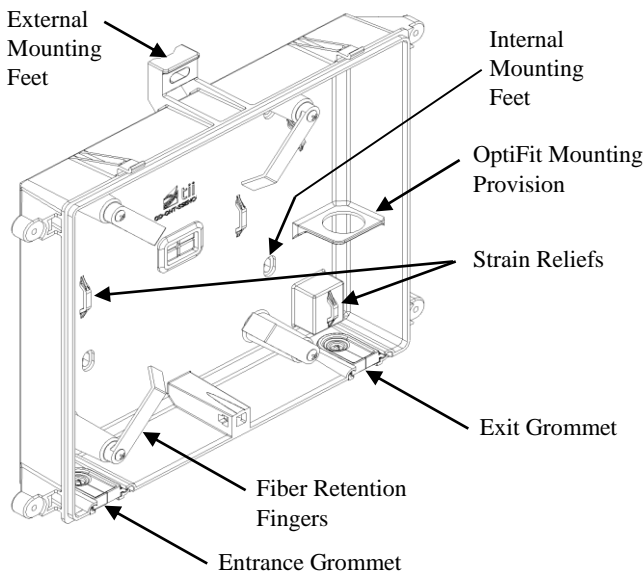


Installation

1. Mount the OD-ONT-SSENC Slack Storage Tray to a suitable surface with screws (not included). Recommended screw size: #10 x 1 1/2" pan head self-tapping to be used in conjunction with plastic wall anchors.

CAUTION: The ONT Enclosure and Slack Storage Tray must be mounted to a flat vertical surface with the top edge level to the ground and mounted no less than 3ft from the ground. Mounting either enclosure to an uneven surface may introduce mechanical stress which can compromise the weather tightness of the enclosure, potentially damaging internal equipment.

2. Install the fiber cable slack into the Slack Storage Tray by swinging the fiber retention fingers outward. Place the coiled up fiber slack into the storage tray. Be sure that the fiber enters from the left grommet and coils clockwise. Once the coiled fiber slack is installed in the correct direction, rotate the fiber retention fingers back to their original positions over the coiled fiber slack, in order to retain the cable. (See Figure 2).

Figure 2

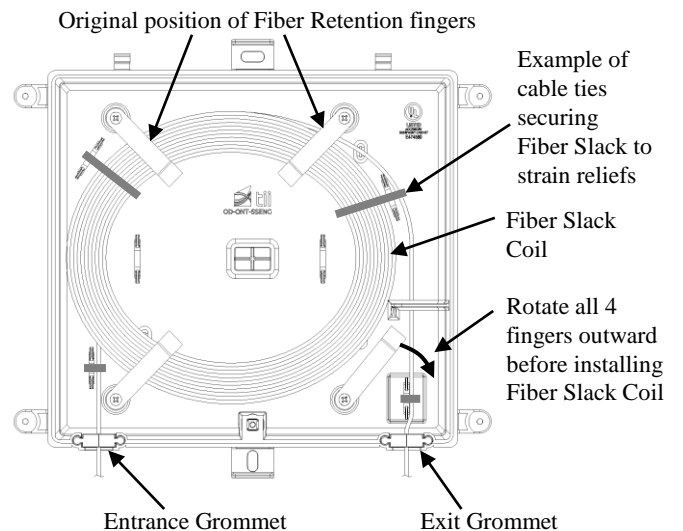


3. Use cable ties to secure the coiled fiber slack to the strain reliefs in the Slack Storage Tray. (See Figure 2).
4. If an OptiFit connector (not included) is required, install into the provision supplied in the Slack Storage tray (See Figure 1) and connect fiber cable to the OptiFit as needed.

CAUTION: After cable installation, any gaps in grommets must be sealed with Silicone RTV to maintain weather resistance of the enclosure.

5. Mount the OD-ONT-ENC Outdoor Enclosure or the OD-ONT-SSC Slack Storage Cover in accordance with the installation notes supplied with those models, to the OD-ONT-SSENC Slack Storage Tray, using the (4) screws supplied with the kit (Figure 3). Do not over-tighten the screws.

Figure 3

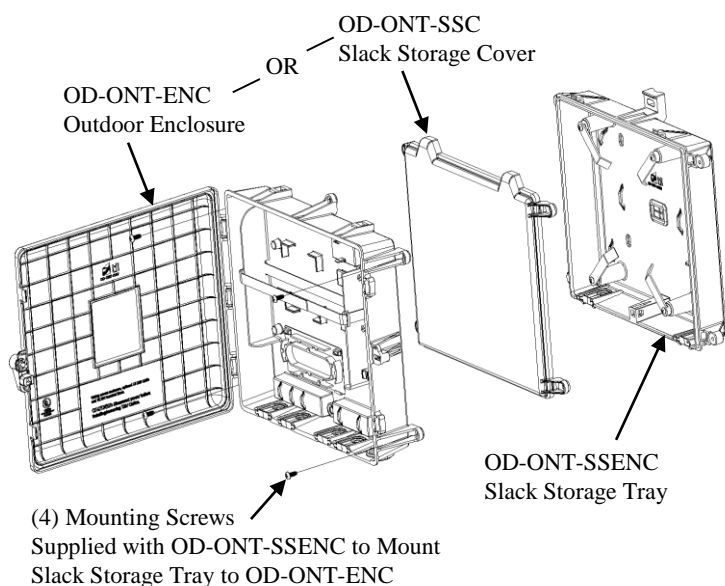

***Notes:**

1. The Maximum weight this unit can withstand is 1.5lbs