


Warranty: If this unit fails during the warranty period, contact tii customer service to authorize return. Unit may be returned prepaid.



141 Rodeo Drive
Edgewood, NY 11717
Toll Free 888.444.4720
www.tiinettech.com

Model 764 Series
Indoor Telephone Surface Mount Phone Jack

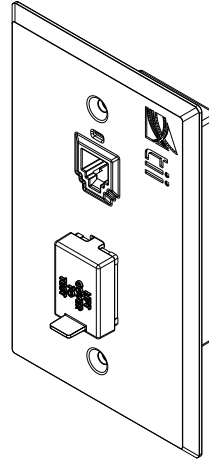

Installation Note

CAUTION: The Product shall be installed in a manner to comply with applicable national and local safety codes.

ATTENTION : Le produit doit être installé de manière à se conformer aux réglementations nationales et locales applicables en matière de sécurité.

Description

1. The Tii 764S Series is an indoor telephone surface mount phone jack with AutoJack Test Receptacle and Sealed IDC Rockers.
2. The Tii 764S-01 Series is an indoor telephone surface mount phone jack with AutoJack Test Receptacle and Sealed IDC Rockers with half ringer.
3. The Tii 764 Series utilizes gel sealed insulation displacement terminations that provide reliable connectivity.
4. The Tii 764 Series is for indoor use only.
5. IDC rockers are used to terminate 26-22AWG solid wire.

Installation

1. Locate the existing phone jack outlet box that first enters the premises and disconnect the incoming telephone service to the RJ-11.
2. Place the 764 on flat surface so IDC's are easily accessible.
3. Pull both rockers to the full up position. DO NOT strip wires. Hold the wire pair to be terminated between thumb and index finger. Insert wires into wire guides simultaneously until they bottom-out. While holding wires in position, terminate rocker by lowering to the full DOWN position. Figure 1.
4. Dress the wires properly inside the junction box and secure the 764 to the junction box using the supplied #6 oval head screws as shown in Figure 2.
5. Connect existing phone from this location into the phone RJ-11 receptacle on the front face plate.

Features

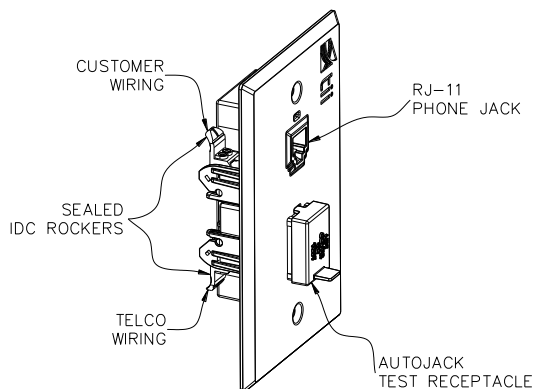


Figure 1

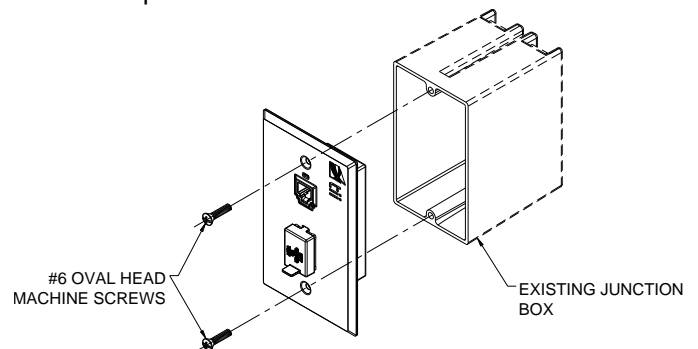


Figure 2