



141 Rodeo Drive  
Edgewood, NY 11717  
Toll Free 888.844.4720  
www.tiitech.com

**Model FIT**  
Fiber Installation Tool



## Installation Note

### Description

The FIT Tool facilitates installation of fiber jumpers through premise walls.

### Installation

1. Remove shroud if not pre-removed by factory (Figure 1)

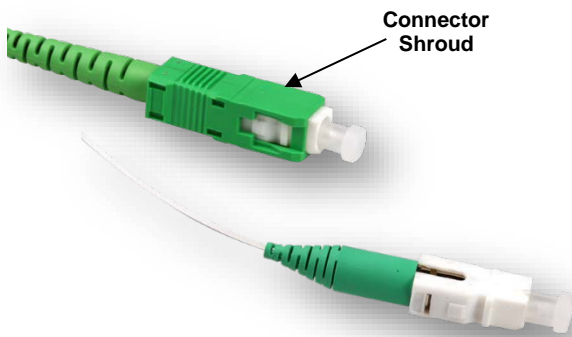


Figure 1

2. Temporarily remove dust cap from connector end (Figure 2)



Figure 2

3. Align connector end with hole in end of FIT tool and reinstall dust cap to secure the connect in place (Figure 3)



Figure 3

4. Dress fiber cable along length of FIT tool. Secure the end of the fiber cable to FIT tool using a piece of tape (Figure 4)




Figure 4

5. Drill  $\frac{1}{2}$ " diameter hole through wall and pass the FIT tool with fiber cable through the wall. Push through a sufficient distance so that the connector clears the other side of the wall. (Figure 5)



**Figure 5**

6. Pull FIT tool completely thru wall and remove the connector (Figure 6)

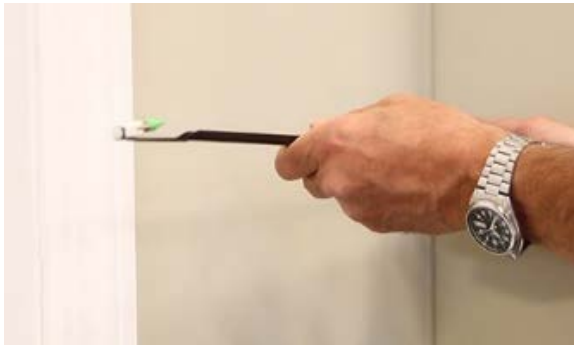

**Figure 6**