

Corporate Headquarters:

141 Rodeo Drive
Edgewood, NY 11717

Phone: 631.789.5000


Fax: 631.789.5063

Toll Free: 888.844.4720


sales@tiitech.com

www.tiitech.com



Models: HCCB HYBRID Configuration.

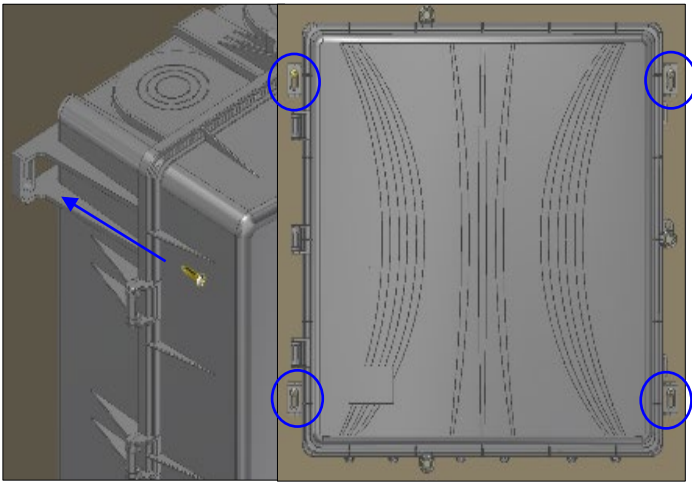


1.1 WALL MOUNT THE TERMINAL WITH #10 SCREWS

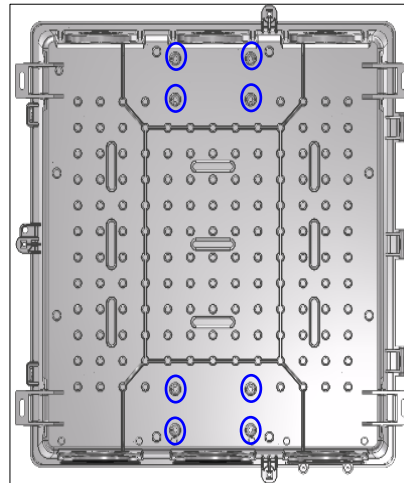


1.2 ATTACH THE POLE MOUNTING BRACKETS ON THE INDICATED THREADED HOLES. SECURE TO POLE WITH STEEL STRAPS.

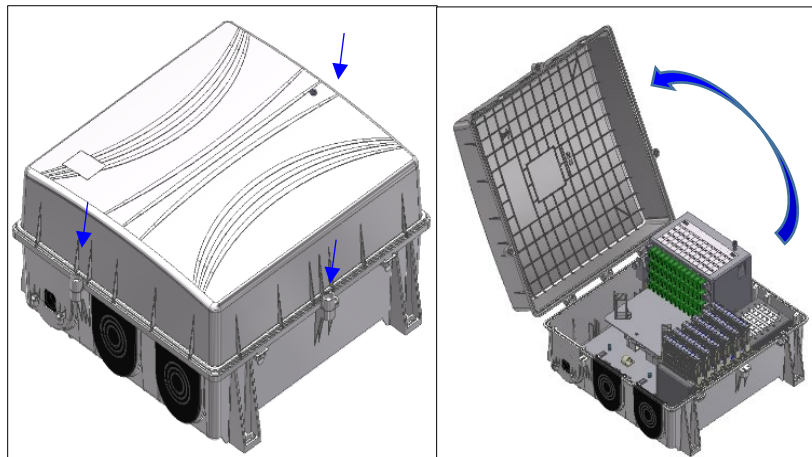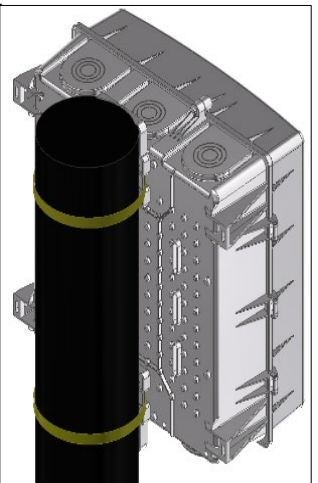


2. LOOSEN SCREWS AND OPEN THE COVER

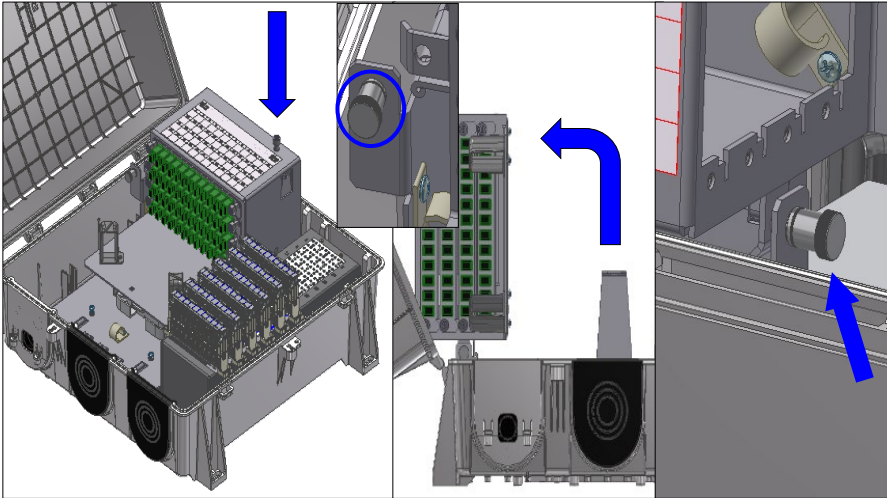


3. LOOSEN THE CAPTIVE SCRW AND OPEN THE CASSETTE CARRIER UNTIL THE PLUGER PIN ENGAGES.

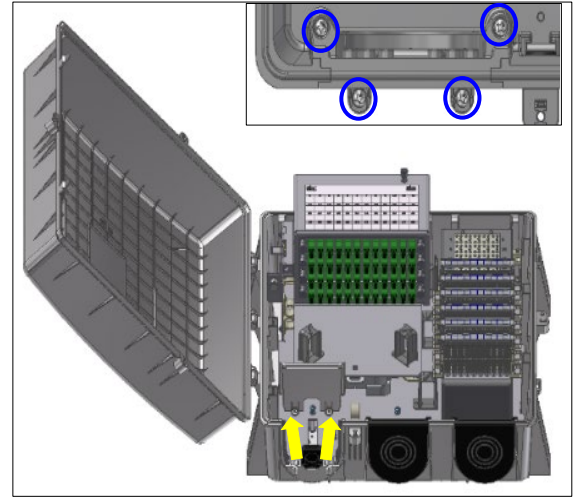


4. REMOVE SCREWS AND PORT CAPS TO INSTALL CABLE

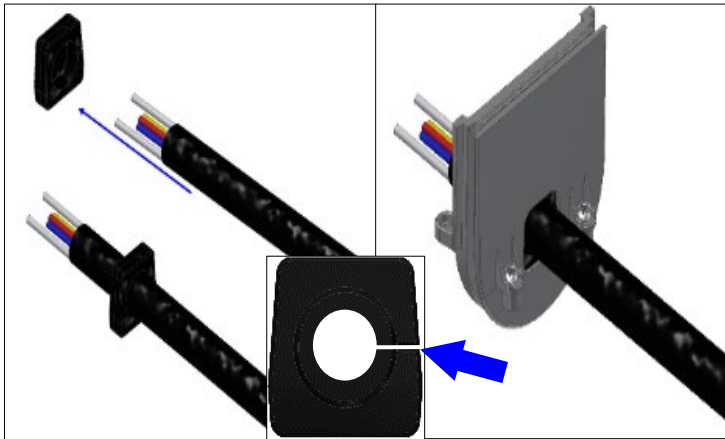

5. MAKE A CUT ON THE GROMMET, INSTALL OVER CABLE AND ASSEMBLE PORT CAP.

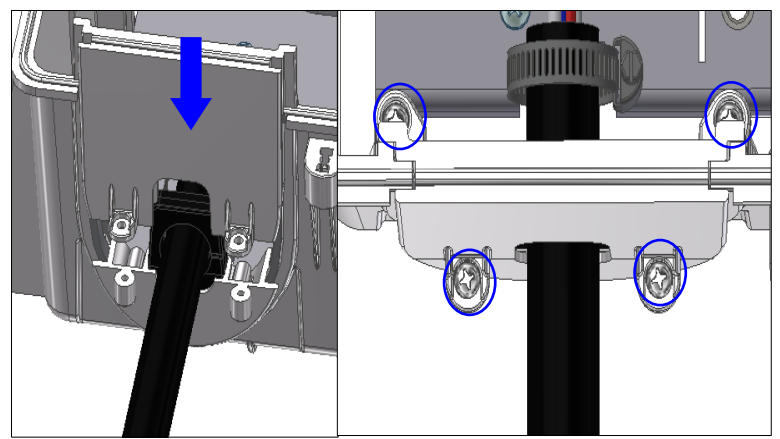


6. INSERT PORT CAPS INTO BASE AND SECURE WITH SCREWS AT INDICATED LOCATIONS.

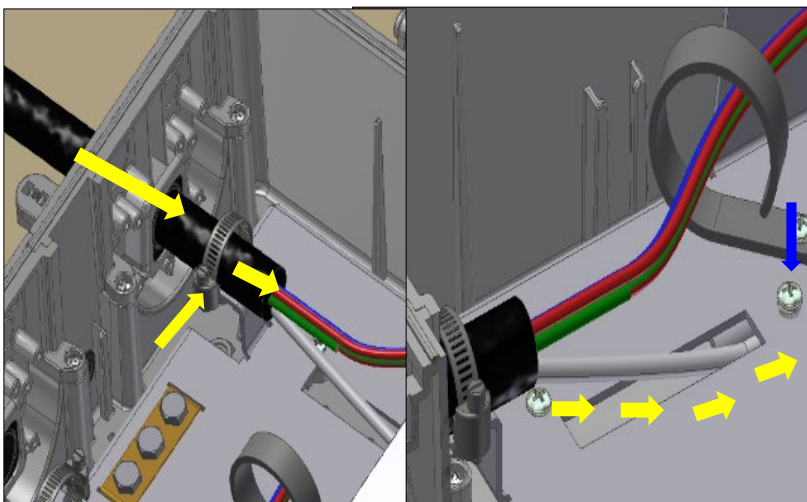


SECURE JACKET WITH HOSE CLAMP

TIGHTEN STRENGTH MEMBER


7. SECURE CABLE JACKET AND STRENGTH MEMBER

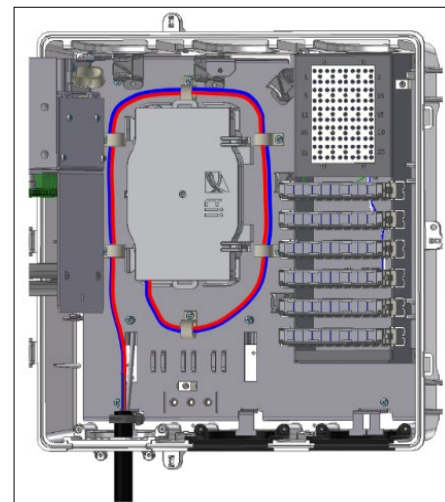


8. ROUTE FIBER AS INDICATED INTO SPLICE TRAY

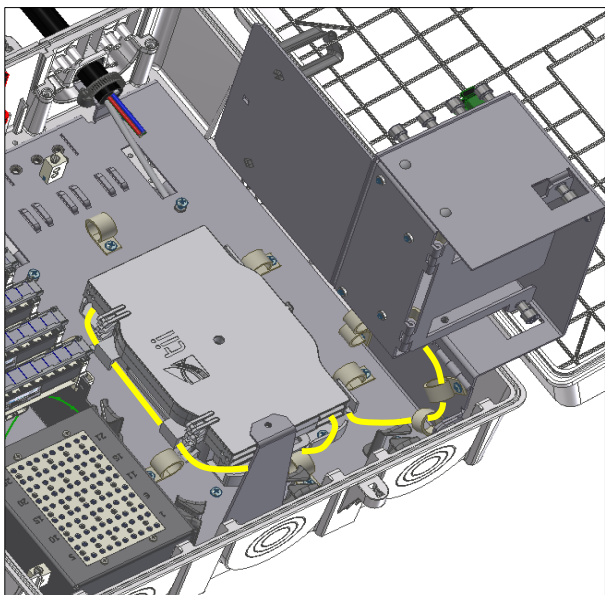


9. ROUTE THE CASSETE FEEDING CABLES INDICATED INTO THE SPLICE TRAY.

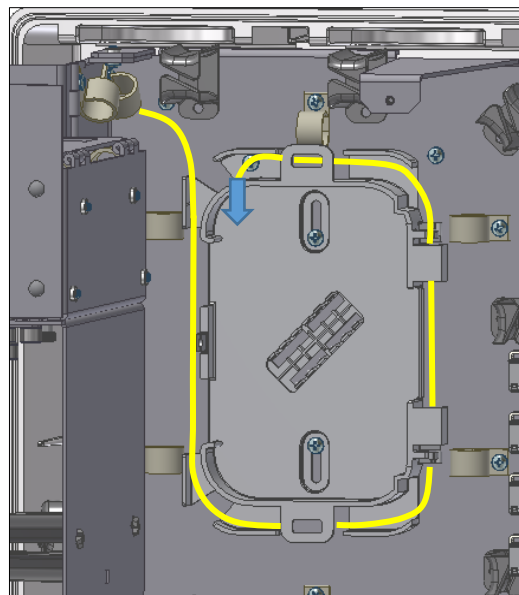


10. MAKE THE REQUIRED FUSIONS INSIDE THE SPLICE TRAY

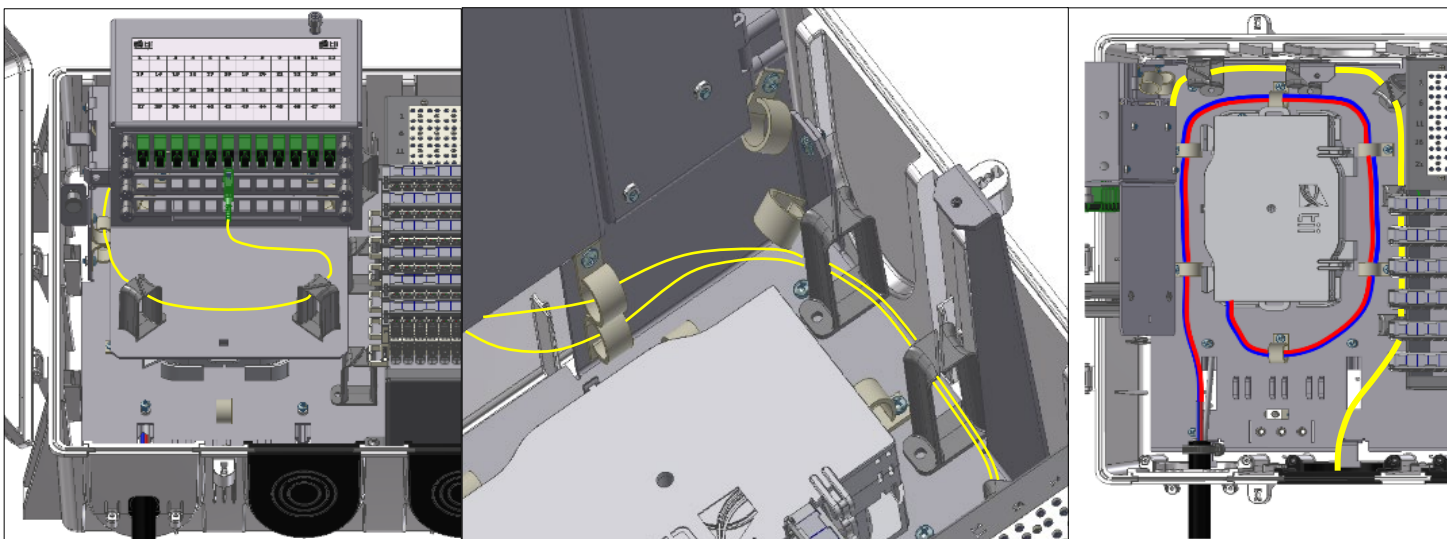

11. PLUG THE DROPS TO THE CASSETTE ADAPTERS AND ROUTE THE DROPS USING THE CLIPS AS ILLUSTRATED ABOVE.

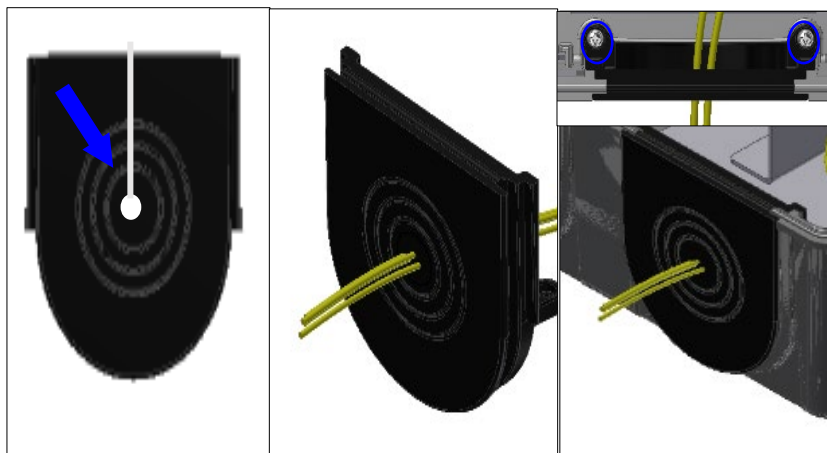

12. CUT THE GROMMET FROM ROUND SIDE TO THE CENTER AS SHOWN, INSTALL THE PORT CAP INTO THE BASE OPENING WITH 2 SCREWS.

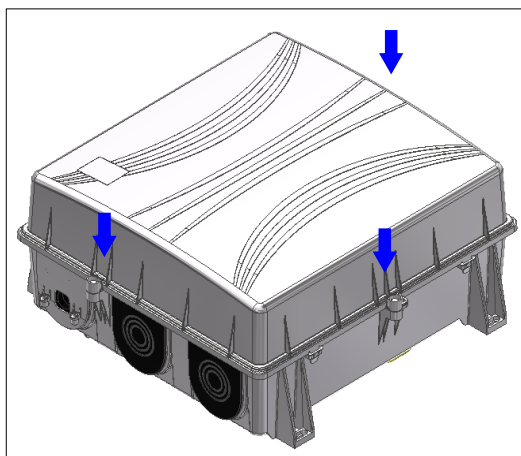

13. CLOSE THE COVER AND TIGHTEN SCREWS WITH 216 TOOL